



Motorized Foot and Leg Spa Bath Massager

A Tradition for Foot Reflexology




Instruction Manual
Model: KH296

This user manual provides both operation information of this product and its detailed specifications. Read this manual and understand it thoroughly before operating.

*** Keep this manual for future reference ***

READ AND SAVE IMPORTANT SAFETY INSTRUCTIONS

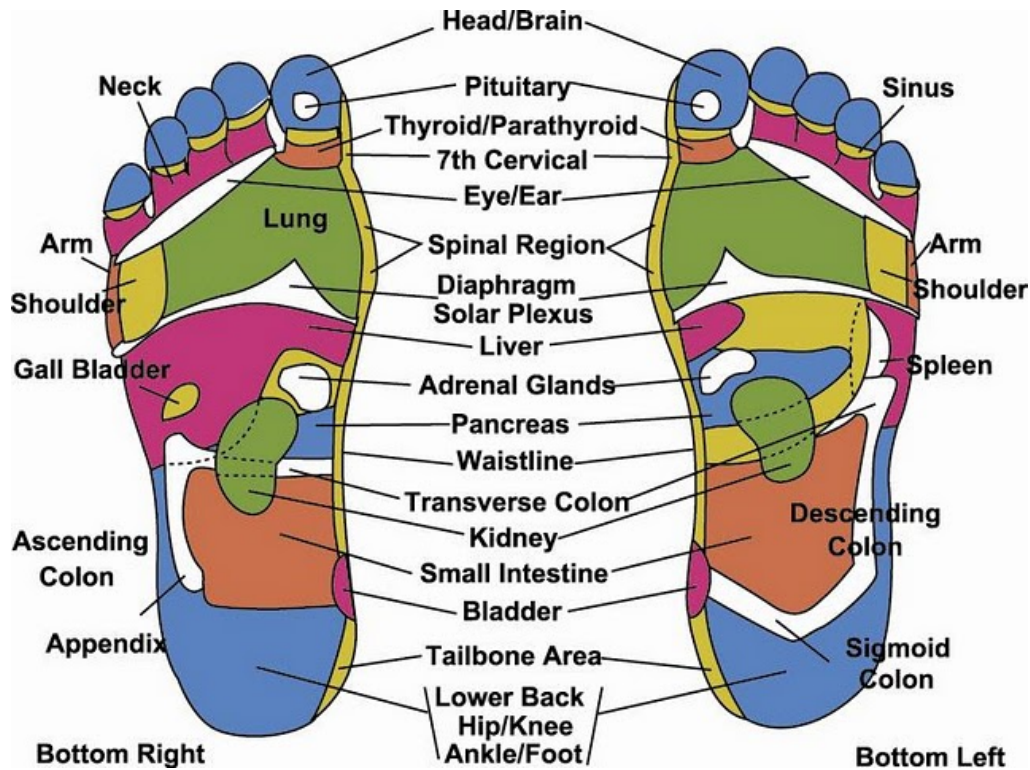

SAFETY NOTE:

⚠ Attention: Never try to turn on the power or operate this device without having water inside the container.

⚠ Attention: This device is designed for private use, not intended for medical or commercial purpose. Children should be supervised to ensure that they do not use this device as a toy.

CAUTION:

- Never try to turn on the power or operate this device without having water inside the container.
- Do not immerse the device into water for cleaning.
- DO NOT attempt to stand up on this device or its water container or walk into the foot bath container. Use it only when you are being seated on a chair or sofa.
- Do NOT try to plug or unplug the power source if your hands are wet. Do not

try to touch the control panel if your hands are wet.

- Do not use the device if you are hungry, right after meal, drunk, or right after extreme exercise.
- Do NOT use the device if you have wound or after surgery and not yet fully recovered on legs or feet.
- Do NOT use this device continuously for more than 50 minutes at a time. The device has preset working time of 50 minutes. It'll automatically turn off when the time is up. It is recommended to take a 10 to 15 minutes break for every 50 minutes of use.
- Do not use this product while you are sleeping and avoid falling asleep while the product is operating.
- Always remove the plug from the power outlet after use. Never leave this device unattended while power is connected.
- Never use the device close to heater, fireplace, stove or heat source.
- Always escort and pay attention while children, patients, disabled and elderly people are using this device.
- Never use the device if the plug or wire is damaged, not in a smooth operation as it should be, broken or wet.
- People with heart disease or prohibited to have excited exercise should not use this device unless you have consulted with your doctor.
- People with skin allergy, wounded or after surgery and not well recovered should not use this device unless you have consulted with your doctor.
- Unauthorized person is not allowed to reconstruct or replace the component of this device.
- Do not use this device in sauna room or bath room, or in area where has high humidity.
- Close supervision is necessary when this appliance is used by, close or next to children, invalids, or disabled person.
- Never let children, mental retarded and people with difficulty in action to operate this device and to reach the power source.
- If the device was not used for a long time, check it first before use again.
- Extensive use could lead to the product's excessive heating and shorter life. Should this occur, discontinue use, unplug the power source and allow the unit to cool before operating again.
- DO NOT use this product as a substitute for medical attention or treatment.
- This product is designed for home use only.

MEDICAL NOTES:

1. To avoid excessive stimulation of skin, the massage time should not exceed the recommended 50 minutes at a time (its default time).
2. If your doctor / orthopedist does not particularly forbidden foot spa massage, you can enjoy the massage following your doctor's instruction.
3. A massage should never feel unpleasant. Should pain or discomfort result, discontinue use and consult your doctor.

4. Over exaggerated massage can also harm the body.
5. People who are unable to feel normal temperature, the ill persons undergoing medical treatment and children should not use this device. In case of injuries to legs and feet, a massage can be dangerous. If in doubt, talk to your doctor beforehand.

WARNING — TO REDUCE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

1. This device should never be left unattended when plugged in. Unplug from outlet when not in use.
2. Close supervision is necessary when this device is used by, on, or near children, invalids, or disabled persons. **THIS DEVICE IS NOT A TOY.**
3. Use device only for its intended use as described in this manual.
4. Never operate this unit if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to service center for examination and repair. Never try to repair this device by yourselves.
5. Do not carry this unit by the supply power cord or use the power cord as a handle.
6. Turn all controls to OFF position, before removing plug from outlet.
7. Use only the original adaptor that comes with the device.
8. It is recommended not to use any electronic devices while using the foot spa massager, avoid possibly dropping electronic devices into water container.

NOTICE: this massager should not be used in the following cases:

- Massage should be comfortable and pleasant. Should pain or discomfort result, discontinue use and consult your doctor.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
- This product should never be used by an individual with a medical condition that would limit the user capability to operate the controls.
- Never use this product directly on swollen or inflamed areas of the skin or on areas where skin eruptions are present.
- Do not operate after taking pain killers, sedatives or alcohol. Consult your doctor if under these medications.
- Always unplug the power cord from the electrical outlet after using it and before cleaning it.
- Keep power cord away from heat or wet sources.
- **DO NOT** immerse this device in water or with any other liquid.
- **DO NOT** use attachments that are not recommended by manufacturer with this device.
- Do not use it when you have insensitive skin in your targeted areas or in the environment of poor air circulation. The unattended use of heat by children or

incapacitated persons may be dangerous.

- It is recommended not to use the device 30 minutes before or after meal.

SPECIAL WARNING:


- DO NOT place or store this device where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- DO NOT attempt to plug or unplug the power source while your feet are in the water container.
- Use the device on a dry sturdy level surface.
- Always unplug the power source when loading water or moving the unit.
- Consult your doctor before using this device if you have diabetes, as diabetes can contribute to foot problems including decreased feeling or circulation to the feet.
- If you take foot spa everyday, you should rub lotion or skin moisturizer and wear socks for keeping warm after taking foot bath.

ATTENTION:

- This device is being tested with water at factory, if there is any water drops left inside water container, it is normal.
- To speed up water heating time and save electricity, it is fine to put warm water into water container, but the warm water temperature should be less than 40°C Celsius degrees.
- Do not leave water inside the water container if the room temperature is lower than 0°C. Frozen water inside the device may cause damage to its components.


Filling water

35°C-38°C

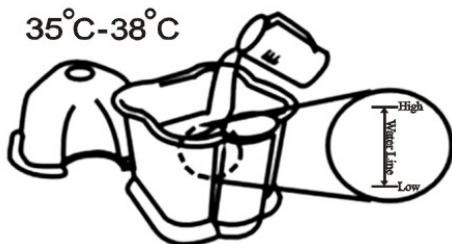





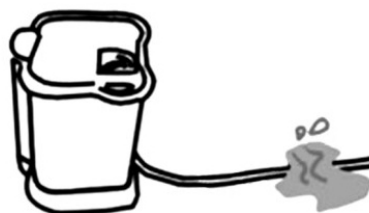


- ▲ To speed up water heating time and save electricity, you can put in some warm water to its minimum water level as long as its water temperature is less than 38°C.

Drain water



- ▲ Turn off power on control panel and unplug the power cord from wall outlet. Lower down the water valve from container wall, and then release the lock on valve to drain out water. Remember to close the valve lock after drainage.

<p>1</p> 	<p>2</p> 
<p>Do not stand up on the massager or inside the container. Avoid being hit by heavy objects.</p>	<p>Do not use the power cord to drag the massager around. Do not pull the power cord. Do not try to plug or unplug the power cord when your hands are wet. Otherwise, it may cause damage to power cord or cause electric shock.</p>
<p>3</p> 	<p>4</p> 
<p>Do not pour into the container with hot water that is more than 45°C. It'll cause overheating of electrical device.</p>	<p>After each use, before trying to move it and or clean up container, always turn off power on control panel and unplug the power cord from wall outlet first. Otherwise, it may cause electric shock.</p>
<p>5</p> 	<p>6</p> 
<p>Never put the foot spa massager on floor that is wet, never put the foot spa massager into other water container or inside shower room. Otherwise, it may cause electric shock.</p>	<p>During use, make sure the wheels are completely lock and the massager is located on non-slippery floor. Be careful not to spill hot water over people around.</p>

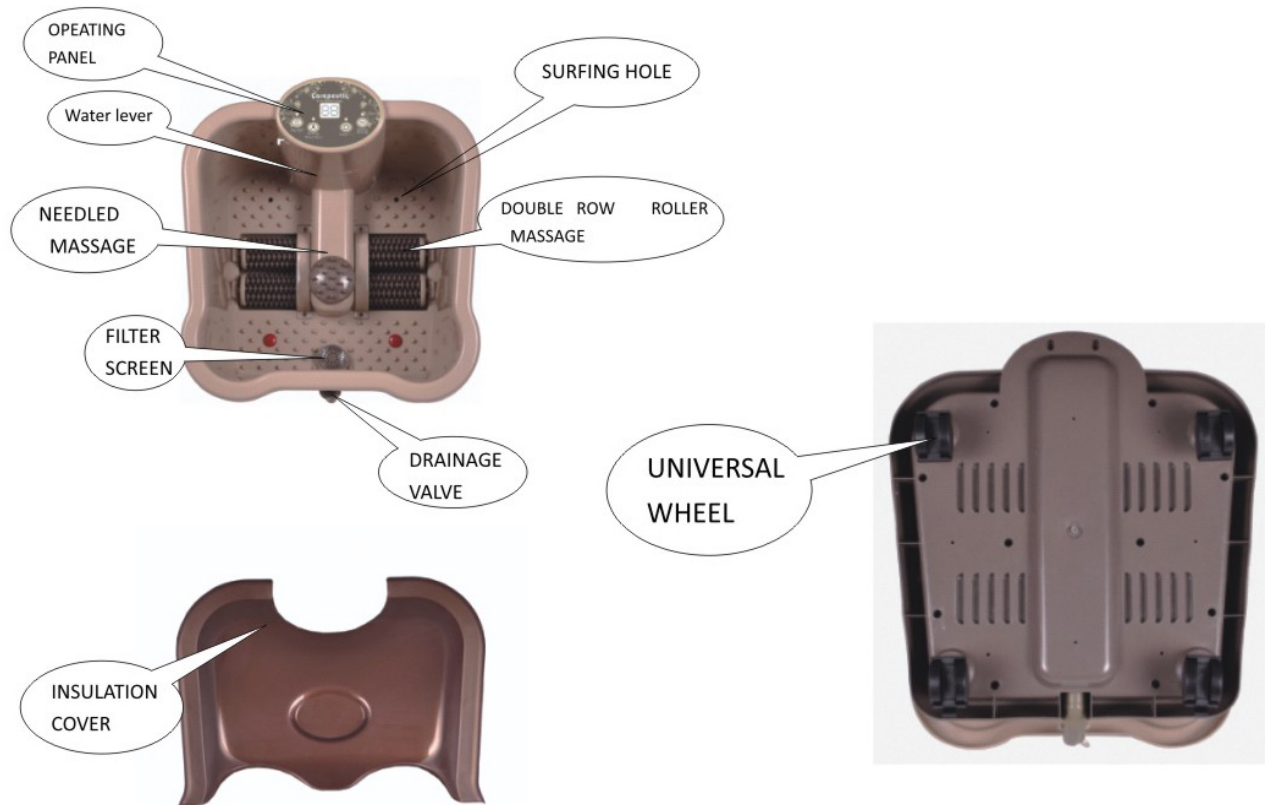


1 Main Parameters

- Rated voltage: 110V AC
- Rated frequency: 60HZ
- Rated power: 900W (KH296)

2 Operation Instruction:

NOTE: You must fill in water before turning on the foot bath massager. Never try to operate this device without having water inside the container.

20121023 FBM-958豪华型
133*88mm

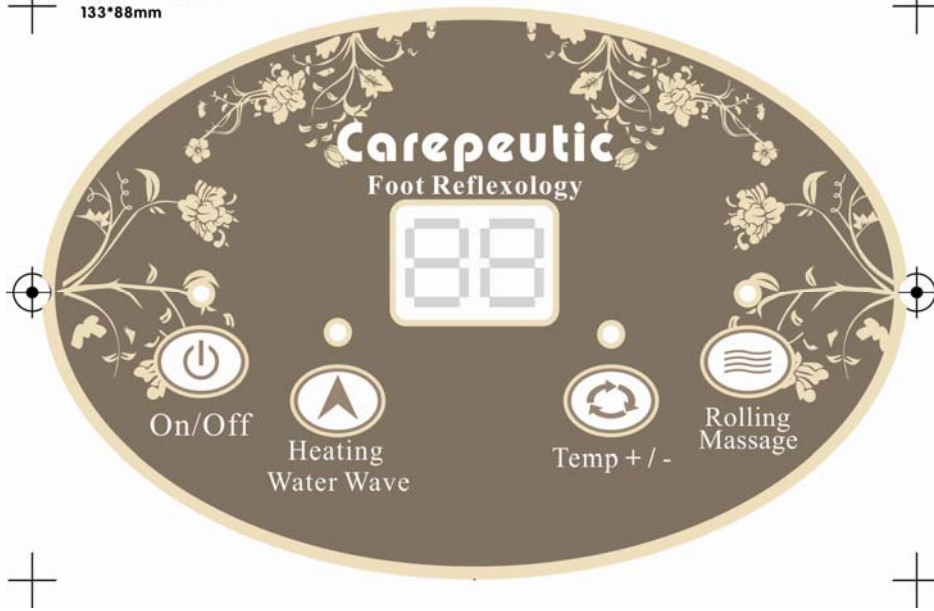

1	Stabilize the Device	<p>Allocate the appliance on the flat floor where you want to use, LOCK the Mobile Caster (4 wheels on bottom) so that the appliance will not move during use. (Do Not plug in power cord to wall outlet now).</p> <p><u>4 wheels on bottom of massager:</u> For easy transport, these 4 wheels are not assembled in factory. Gently slide in the wheels and lock it once the massager is ready to use.</p> <p>Note: once you assemble the wheels, do NOT try to pull it out again; otherwise, it'll cause damage to the wheel lock.</p>
2	Filling in Water	<p>You must fill in water <u>before</u> turning on the foot bath massager. Never try to operate this device without having water inside the container.</p> <p>There is marking of maximum water level inside water container. Never filling in water that is more than its maximum water level.</p> <p>After filling in water, plug in power cord to wall outlet.</p>
3	ON/OFF	<p>Press ON/OFF button once, "ON/OFF" indicator light is on in red, the two-digit LED display shows the current water temperature; Press the ON/OFF button again to turn off power completely.</p>
4	Heating /water wave	<p>Press the Heat/Water Wave button <u>once</u> (first time), the water bump starts operating under water jet mode. When the water temperature is lower than the preset minimum of 35°C, the Heat/Water Wave indicator light is on in yellow and the heat function will automatically turn on, and then the heat function stops when the water temperature reaches its preset maximum of 47°C and its Heat/Water Wave indicator light is on in green.</p>

		<p>By now, the Temp+/- button is ready to use. You can press Temp+/- button to adjust the water temperature you like (35°C - 47°C). After you press the Temp+/- button to adjust the water temperature, its indicator light is on in yellow, after 3 seconds, the screen will display the current water temperature in container. The heat function will automatically turn on and stop when the water temperature reaches the temperature you just set.</p> <p>Now, if you press the Heat/Water Wave button <u>second time</u>, the Auto-Temperature-Balance Heating system will stop working, and the screen will only display the current water temperature, the Temp+/- button cannot be used, its indicator light is off.</p>
5	Temp+/-	The Temp+/- button can be used ONLY when you turn on the Heating/Water Wave button. If you do not press the Temp+/- button to adjust the temperature, the water temperature will stay between 35°C/95°F - 47°C/116°F (default setting). The Auto Temperature Balance Heating system will turn on/off the heat function automatically.
6	Rolling Massage	Press the Rolling Massage button once, the motorized rolling massaging starts, its indicator light is on in yellow. Press the Rolling Massage Button once again, it stops and its indicator light is off.
7	Two-Digit display	When the power is turned on, the LED screen displays current water temperature.
8	Timer	The device has preset working time of 60 minutes. It'll stop working when the time is up. If you want to use it for longer time, turn on the power again. It is recommended to take a 10 to 15 minutes break for every 30 minutes of use.
9	Water Drainage	<p>After each use, before trying to drain out water, always turn off power on control panel and unplug the power cord from wall outlet first.</p> <p>Move the water container to where you want to drain out water and then lower down the water valve from water container wall and release the lock on valve to drain out water.</p> <p>Remember to close the valve lock after drainage.</p>
10	Clean up	After each use, before trying to clean up the container with dry towel, always turn off power on control panel and unplug the power cord from wall outlet first.

 
3 Features

- Motorized rolling massage with four massage rollers.
- Temperature control: Set the temperature according to your need.
- Digital Heating with automatic balancing system: Adjustable heating temperature with LED display, 35°C (95°F minimum) - 47°C (116°F maximum). The heat function will be turned

on/off automatically when the water temperature is lower than 35°C or higher than 47°C. But you can also set the water temperature you like (35°C - 47°C).

- Two water jets surfing water cycle with 300 massage burls simulating foot reflex zones.
- Mobile Caster: the dexterous caster makes it easy to move around for storage or transit.
- Static drainage function: the unit has built in drain valve that makes it easy to drain water.
- With transparent cover, avoid water spilling out.
- Water volume: 20 liters

4 Circuit board diagram

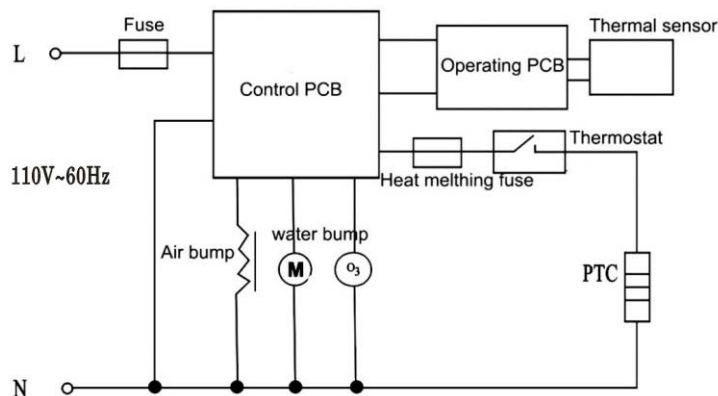

5 Cleaning and Maintenance

- Before draining out the water from the water container or cleaning the appliance, you must turn off the device and unplug the power cord from the electric outlet..
- It is recommended to always drain out water along the drain valve; do not pour water over the control panel.
- Clean the device only with a soft cloth and mild cleansing agent. (Never use strong abrasives, detergents or cleaning agents.)
- DO NOT immerse the appliance in water or under shower.
- Gently wrap the power cord around the cord wrap storage on the bottom of device.
- It is not recommended to put in tea bag, salt or other detergents; if you do, try to clean up right after use so as to avoid leaving anything inside water valve. To clean up, you can put in some clean water and turn it on for 1 minute and follow the water drainage procedure to drain out water.

6 Storage

Unplug the appliance from the electric outlet and allow it to cool down and get dried.

- Store it in its box or in a clean, dry place.
- DO NOT hang the unit with the power cord.
- This appliance is designed for indoor use only.



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the

retailer where the product was purchased. They can take this product for environmental safe recycling.

Troubleshooting:

Problem	Cause	Solutions
Water Jet not working	check the water filter	clean up the water filter if necessary
Heating not working	it may reach the preset maximum water temperature	Press the Temp+/- to adjust the preset water temperature.
Device stops working	preset working time is up (max. is one hour).	Try to turn off the power source completely for a while and turn on the power again
	the water temperature is too high.	try to put in some cold water to cool down the water temperature

Note: This product is not intended to diagnose, treat, cure, or prevent any disease.

Limited Warranty

Please contact seller for warranty. Limited warranty from manufacturer only for original purchaser against manufacturing or workmanship defect under normal use. Due to the hygiene or rehabilitation nature of this product, it is non-returnable.

Carepeutic® is a registered trademark, all rights reserved, © Q.L.M.

www.ideatomorrow.com

Powered by Carepeutic® Global Lab